

**If you choose to use the VDO 0-2 Bar ( 0-30 PSI) boost sender then you will need to change the EMS settings as follows:**

PRESSURE TYPE: BOOST  
SPAN: You choose from 0-2 Bar [0-30 Psi]  
TOPSCALE: OFF  
ALARM LOW VAL: 0  
ALARM LOW: OFF  
ALARM HIGH VAL: You choose a value  
ALARM HIGH: You choose OFF or ON  
SENDER MAX  $\Omega$ : 180 $\Omega$   
SENDER MAX PR: 2 [30]  
SENDER DIR: INC  
PRESSURE UNIT: BAR [Psi]  
PRESSURE SWITCH: NO or NC (See Manual)  
PRESS SENDER: VDO

Note: The VDO boost sender has two electrical connectors on, connect any one to the pressure wire (Grey) and the other one to earth on the engine block.